 


EUHOMY



 
SCAN HERE to activate your warranty
and become part of the Euhomy community!

When the "ADD WATER" indicator lights up, add water, then press the POWER button to start the ice-making program.

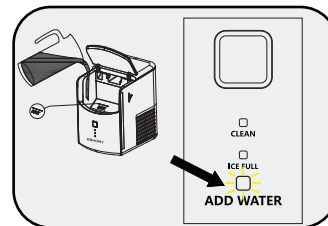

Removing and Storing Ice

Remove ice cubes promptly to prevent melting.

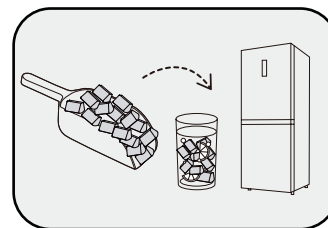

Note: If the ice maker is not used for one day or more, drain all water and wipe the reservoir with a clean, dry cloth.




4. MAINTENANCE

To ensure hygiene and optimal performance, run the self-cleaning program to clean your ice maker daily.
It is recommended to clean the machine with ice maker cleaner every 1 to 3 months.

Long-Term Storage

If the ice maker is not used for an extended period, thoroughly drain all water, wipe it dry with a clean cloth, and store it properly.

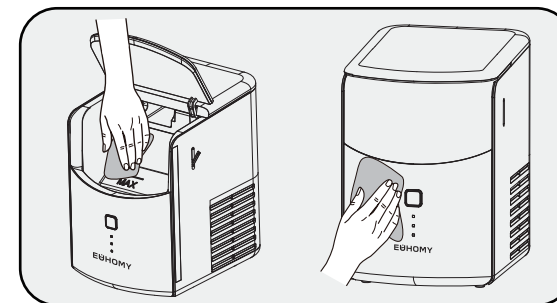

Please refer to the product manual for more detailed information on:



usage



cleaning



maintenance



troubleshooting

support@euhomy.com

1-833-362-2655(US)

www.euhomy.com

EUHOMY

QUICK GUIDE

Euhomy Pearl L1 Max Nugget Ice Maker

IM039-NBG-USEH
IM039-NGR-USEH

IMPORTANT SAFETY INSTRUCTIONS

- STOP!** Before First Use: Let the machine sit upright for 24 HOURS to prevent permanent damage. Skipping or ignoring this step voids the warranty.
- Keep the appliance and cord out of children's reach. Close supervision is necessary when used near children.
- Install on a stable surface according to the instructions.
- DO NOT** store items on top during use.
- DO NOT** expose to sunlight.


1. SETUP



SCAN HERE to watch the installation, usage, cleaning videos and more information.

Unpack

Remove packaging and check that all accessories are included.

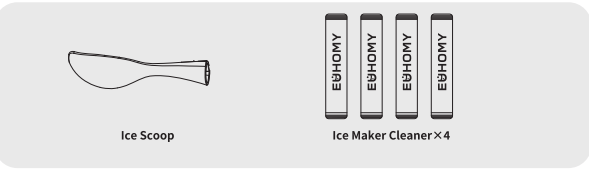


Settle Refrigerant

Place the machine on a level surface and let it sit for **24 hours** to allow the refrigerant to settle before proceeding with setup and use.


Position

Set up the machine on a flat, stable surface. Avoid direct sunlight or heat sources.

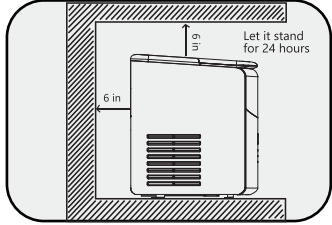

Plug Accessibility


The power plug must be directly accessible.

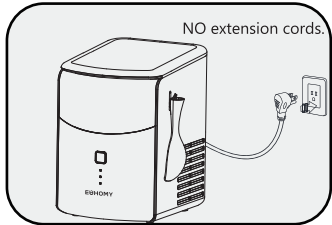

2. FIRST-TIME CLEANING BEFORE USE

Manual Rinse

With the power off, use a dry cloth to wipe the exterior of the ice maker. Clean all internal parts that come into contact with water.

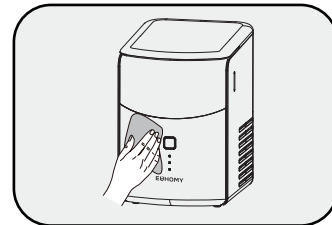

Self-Cleaning

Remove the ice basket and fill the water reservoir without exceeding the MAX line.





Pour in one packet of ice maker cleaner.
Note: DO NOT add the powder to the water tank before filling it with water, as undissolved particles may cause clogging in the water lines.

Press and hold the POWER button for 3 seconds to start the self-cleaning cycle (the cycle completes in approximately 15 minutes).

After the cycle is complete, drain the water from the reservoir.

Refill with clean water and run the self-cleaning cycle once more.

Run ice-making cycles and discard first basket of ice and water to ensure the unit is thoroughly cleaned before first use.

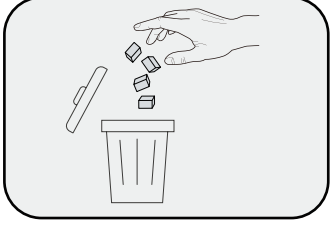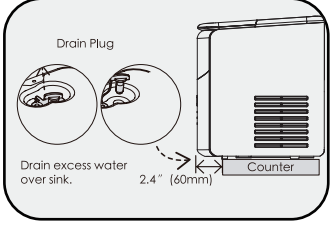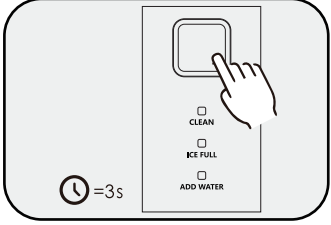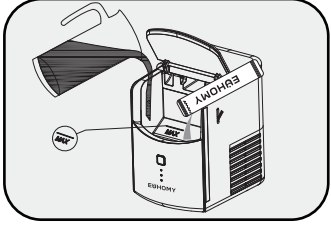

3. ICE-MAKING PROCESS

Filling the Water Reservoir

Open the view window and remove the ice basket.

Pour water into the reservoir without exceeding the MAX line.

Running an Ice-Making Program

Short-press the POWER button to run an ice-making program.

The ice basket is full and ready when the "ICE FULL" indicator turns purple.

